LAKELAND

USER MANUAL

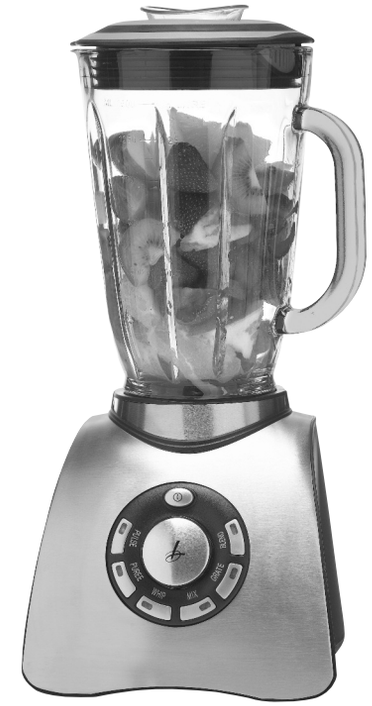

1.5 LITRE JUG BLENDER

Model: 13660

Helpline No: 015394 88100

The Lakeland Guarantee....
is probably the simplest guarantee in the world!
If you are not satisfied at any time, you receive your money back!
This is our promise.

Lakeland
Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

INTRODUCTION

Thank you for choosing this Lakeland Jug Blender. For blending, whipping, pureeing and more, the blender puts a variety of quick-select programmes at your fingertips. Please take a few moments to read these instructions before using your blender for the first time, and keep them in a safe place for future reference.

FEATURES

1. Filler cap
2. Lid
3. 1.5 litre glass jug
4. Jug base with stainless steel blades
5. Power unit
6. On/off switch
7. Six pre-set programme buttons, including PULSE
8. Suction feet
9. Cord storage

Working capacity: 1.5 litre
Operating voltage: 220-240V~50Hz
Power: 500W

IMPORTANT SAFEGUARDS

When using this blender, please follow these basic safety precautions.

1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. This blender is for household use only. It is not suitable for commercial use, or for use outdoors. It must only be used for its intended purpose.
4. Place the blender on a flat, dry surface. Do not let the power cord hang over the edge of the worktop or table, or touch hot surfaces, such as stovetops.
5. To avoid electric shock, do not immerse the power unit, cord or plug in water or any other liquid. Never allow the cord or plug to get wet.
6. Always switch off and unplug the blender before adding or removing parts, when not in use and before cleaning.
7. Before switching on the blender, make sure the jug is correctly positioned and the lid is securely on.
8. The blender will only work when the jug is placed on the power unit. Do not switch the blender on if the jug is empty.
9. The blades are extremely sharp; please take great care when emptying and cleaning the jug. Never put your hands or any utensils inside the jug when the blender is plugged in.
10. Let hot liquids cool to room temperature before blending.
11. Using attachments not supplied by the manufacturer may lead to electric shock, fire or injury.
12. The blender is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the blender. It must not be left unattended during use.
13. Do not use the blender if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair by an authorised repairer, or a replacement. Never try to repair the blender yourself as this may cause electric shock.

BEFORE USING FOR THE FIRST TIME

Carefully unpack the blender and remove any packaging.
Please see CARE AND CLEANING for instructions on cleaning the blender before preparing food.

USING YOUR JUG BLENDER

This blender has been designed for soups, sauces, batter, mayonnaise, milkshakes, smoothies and more. It will puree fruit and cooked vegetables; mix pâtés and dips; chop breadcrumbs, nuts, vegetables and meat; and crush ice. There are six dedicated programmes to choose from at the touch of a button – BLEND, GRATE, MIX, WHIP, PUREE and PULSE, which gives an instant burst of extra power, and will also crush ice.

1. Place your ingredients inside the blender jug, taking care not to fill above 1.5 litre.

2. Press the lid onto the jug. Put the filler cap into the lid opening, and turn it clockwise until locked.

3. Making sure the power unit is switched off and unplugged, place the jug onto the power unit. Plug into the mains socket.

4. Switch on the blender by pressing the on/off switch. A flashing blue light will show the blender is switched on.

5. Place your hand on top of the jug and press one of the six pre-set buttons. It will light up blue when selected.

   BLEND: for soups, sauces, batter, milkshakes, smoothies etc; also for mayonnaise.
   GRATE: for chopped nuts, meat, vegetables and breadcrumbs.
   MIX: for dips, pâtés etc, and for combining liquid and solid ingredients.
   WHIP: to froth milk, whip cream and scrambled eggs.
   PUREE: to puree fruit and cooked vegetables.
   PULSE: to crush ice, or to give an instant shot of power; also helps to avoid over-processing e.g. when mixing fruit cake.

6. When the food is processed, switch off the blender by pressing the on/off switch. Unplug before lifting off the jug and cleaning.

PLEASE NOTE: food should not be stored in the jug after blending.

HELPFUL HINTS

- The blender has suction feet to help keep it steady on your worktop. For extra safety, always keep your hand on top of the blender lid whenever it is running.

- Cut solid ingredients into small pieces, around 1”/2.5cm. For best results, add to the jug a little at a time.

- Always let soups, sauces and cooked foods cool to room temperature before blending.

- To add extra ingredients as you blend, remove the filler cap from the lid. This feature is especially useful when making mayonnaise, allowing you to slowly drip-feed the oil. The cap is helpfully graduated up to 50ml.

- For crushed ice, add just a few cubes at a time, with a small amount of water.

- Solid or thick ingredients may need scraping down from the jug sides with a spatula. Remember to switch off and unplug the blender first. If the mixture is difficult to process, add a little liquid or press PULSE.

- To avoid overheating, do not run the blender for more than 1 minute at a time. Let the motor rest for 1 minute before continuing.

- To quickly rinse the jug between tasks, firstly switch off and unplug the blender. Lift off the jug and fill it with water, then replace the lid. Place the jug back on the power unit, plug in and press the on/off button. Press PULSE several times, then switch off and unplug. Pour out the water and rinse the jug under the tap, then dry.

CARE AND CLEANING

Always switch off and unplug the blender before cleaning. Wipe the power unit with a damp cloth, then dry. It should never be immersed in water. The glass jug and lid may be washed in hot, soapy water, or in the dishwasher. Please follow the steps below.

To wash by hand

1. Lift the glass jug off the power unit and wash the jug and lid in hot, soapy water. Please take great care not to touch the blades when cleaning inside the jug; always use a washing up-brush.

2. Rinse thoroughly, then dry.

PLEASE NOTE: if you prefer to take the jug apart before washing by hand, see below.

To clean in the dishwasher

1. Firstly, unscrew the glass jug from its base. Turn the base anticlockwise. Carefully remove the blades and sealing ring.

2. Place the glass jug and lid in your dishwasher.

3. Wash the jug base, blades and sealing ring in hot, soapy water. Please use a washing-up brush to ensure your hands do not touch the very sharp edges. PLEASE NOTE: these parts are not dishwasher-safe.

4. Once all the parts are clean and dry, fit the sealing ring back over the blades, then place the blades inside the jug base.

5. Carefully screw the glass jug onto the jug base. Turn the base clockwise until tightly locked, to prevent leakage.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit **www.recycle-more.co.uk** to find your nearest recycling point.

ELECTRICAL CONNECTIONS
THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

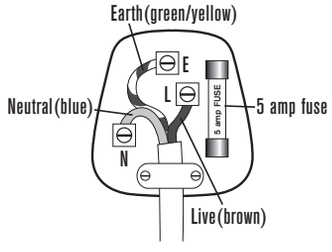

Connect BLUE to Neutral (N)
Connect GREEN & YELLOW to Earth (E)
Connect BROWN to Live (L)
5 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow MUST be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue MUST be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown MUST be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 5 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).